


USE TEFLON TAPE TO SEAL THE THREAD

USE TEFLON TAPE TO SEAL THE THREAD

SIDE VIEW

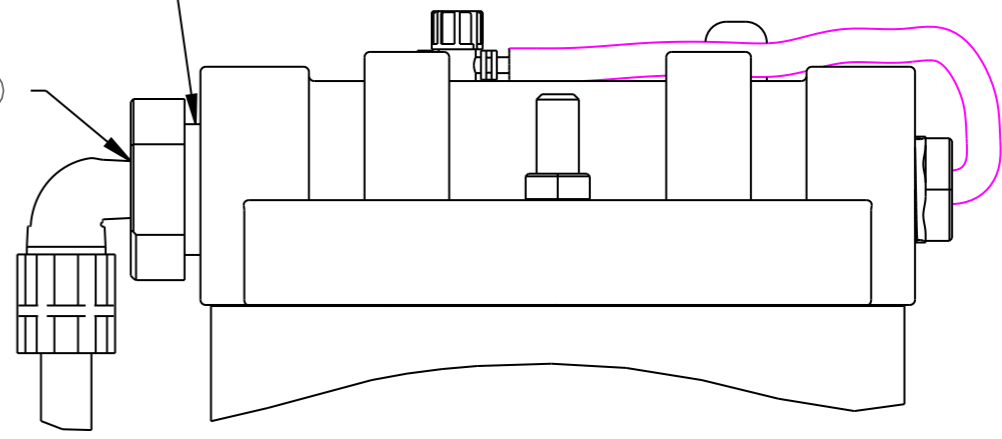

9	Worm drive clamp width 5/16" ID range 7/32"-5/8"	0000000	Buy	00	4
8	Tube ID 1/4" OD 3/8" length 4.7"	0000000	Buy	00	1
7	Tube ID 1/4" OD 3/8" length 2.7"	0000000	Buy	00	1
6	SSL Bushing 3/4" male reduced to 1/4" female	0000000	Buy	00	1
5	Elbow with tube - Assembly	2120710	ASM	00	1
4	Cup with air inlet - Assembly	2120400	ASM	00	1
3	Check valve with barbed connections Tube ID 1/4"	0000000	Buy	00	1
2	Body with bubbler - Assembly	2120600	ASM	00	1
1	Barbed elbow Tube ID 1/4"	0000000	Buy	00	1
#	NAME	DRW No.	SUPPLIAR	CATALOG NO.	QNT



A3

PART NAME			
FIRST AID CELL - ASSEMBLY			
WWW.HYDROGEN-FIRST-AID.COM			
Designer	Pavlo K.	DRAWING NUMBER	MATERIAL
Drawer	Pavlo K.	2121000	-
Approver	Pavlo K.		
TOLERANCES (MM UNLESS OTHERWISE SPECIFIED)		SUPPLIER	CATALOG NUMBER
±	0.5	ASM	00
±	0.5°		UPDATE
			00

